



HOG-600 BARRIER INSTALLATION GUIDE

Hog barriers are compatible with other water filled systems and have a 235 degree ' range of movement.
Add the DoubleTop panels for extra height.

People to Install:



Equipment / Accessories Needed:

No accessories or tools required.

1




Ensure the barrier is set out on straight and level ground.

2




Next, ensure the connection points are lined up on each barrier.

3

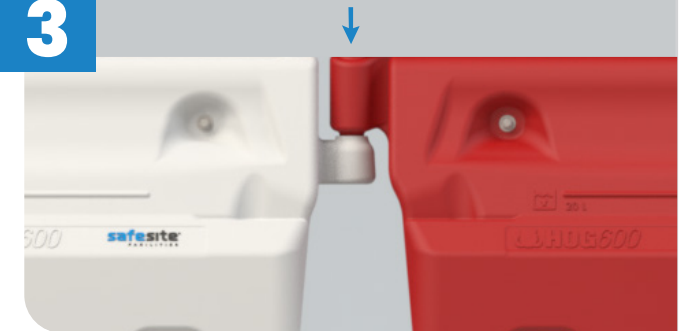

Lift the end of the barrier up and through the hook and eye system to ensure attachment.

4

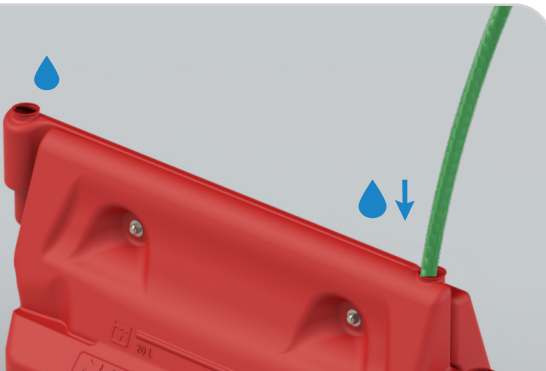

Once the barriers have been moved into position and attached, you can fill them with water. You need to add water to both ends of the barrier.

5



Slide the poles at the bottom of the DoubleTop barrier down and into the holes at the top of the Hog Barrier.

6



Just as with the Hog Barriers, the panels have hooks which slot into the holes of the neighbouring panel. Repeat steps 2 and 3 until the desired number of panels are in place.



Useful Tip: To empty the barriers, detach them from one another and turn the barriers on their side for the water to run out.



Wear the appropriate PPE for this task.