



RB 1000 / 1300 / 1500 BARRIER INSTALLATION GUIDE

Primarily used in the motorsport industry both indoor and outdoor, these would most commonly be used to mark the perimeter of a racetrack.


People to Install:



Equipment / Accessories Needed:

No accessories or tools required.

1

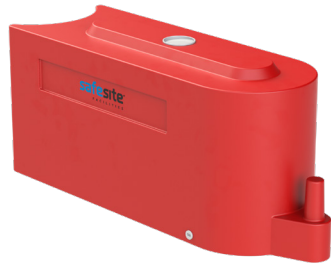

Place the barriers into position as required to create your perimeter.

2



Then, slide the protruding end of the first barrier over the hole of the barrier you want to connect.

3




Repeat this process with other barriers needed. This system can be shaped to allow for 'S' shapes and curves, simply adjust your line of barriers as required.

4



Next you can now fill the barrier with water by removing the cap and using a hose. (Ensure the drainage plug is tight and not leaking when you do this!).

5

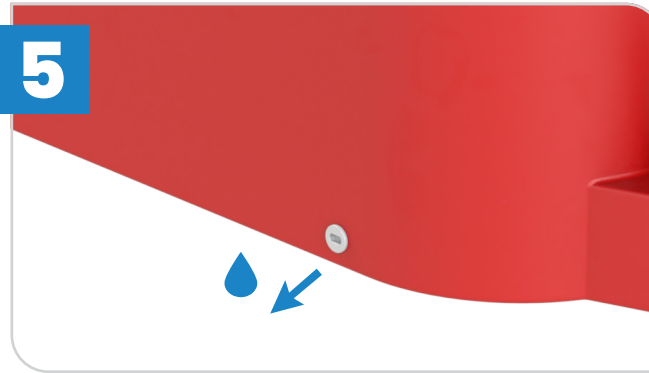

To clear out the water, reverse the process in Step 4 using the drainage tap at the bottom.