



STEEL HOARDING ON GROUND INSTALLATION GUIDE

The 'on ground hoarding system' is installed directly on the ground and is perfect for sites where it's not feasible or appropriate to dig into the ground. On Ground hoarding provides an excellent short-term solution in urban areas where hoarding is located on pavements, roads, or other non-permeable surfaces.

People to Install:



Equipment / Accessories Needed:


- Steel hoarding & Infill panels
- Heavy duty block tray
- Ballast products
- Stabiliser arms
- Couplers x 3



1 Lay the hoarding panels along the perimeter line. Position the block trays next to the edge of each steel panel, so that you have your panels and block trays in the right position, ready for the hoarding to be attached.



2 The block trays have a channel at the front. The steel panel is inserted into the channel. Don't secure the hinge in the block tray just yet, this can be done once the stabilizer arm is in place.

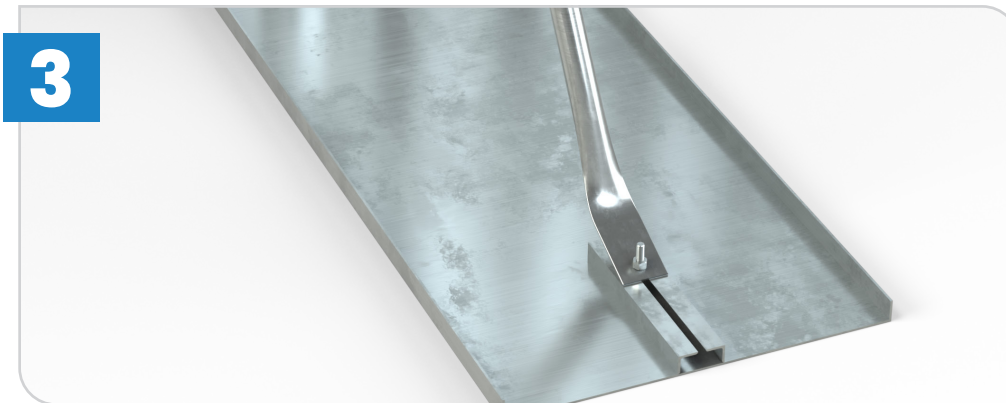

3 Attach one end of the stabilizer arm to the bottom of the block tray at roughly a 60-degree angle.



4 The other end of the stabiliser arm is attached to the top section of each hoarding panel using a coupler. Put the coupler in place and secure the end of the stabilizer arm using the screw and bolt. Screw the other end of the stabilizer arm down into the block tray.



STEEL HOARDING ON GROUND INSTALLATION GUIDE

The 'on ground hoarding system' is installed directly on the ground and is perfect for sites where it's not feasible or appropriate to dig into the ground. On Ground hoarding provides an excellent short-term solution in urban areas where hoarding is located on pavements, roads, or other non-permeable surfaces.


People to Install:



Equipment / Accessories Needed:

- Steel hoarding & Infill panels
- Heavy duty block tray
- Ballast products
- Stabiliser arms
- Couplers x 3

5

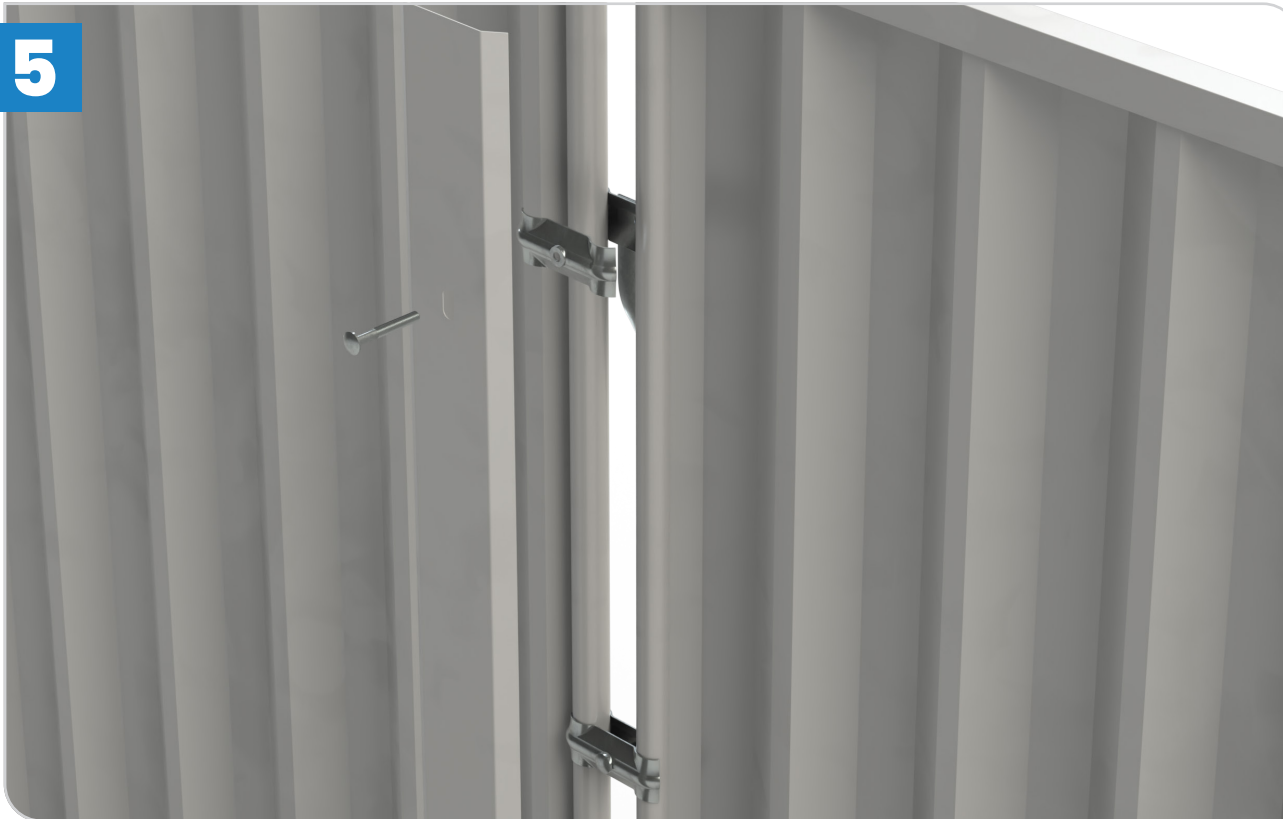

Next for 2m hoarding, install infill panels by filling the gaps between the hoarding. Simply thread the bolts of the top and bottom couplers through the holes on the infill panel. Tighten the couplers to affix it to the hoarding panels.


When installing the 2.4m hoarding, each joint will be secured using three couplers. The panels can only attach to the top and bottom couplers. The remaining coupler will be attached before installation and will cover the panel.

6



Use a coupler to secure the hinge at the front of the block tray to the two hoarding panels you're fixing together.

7

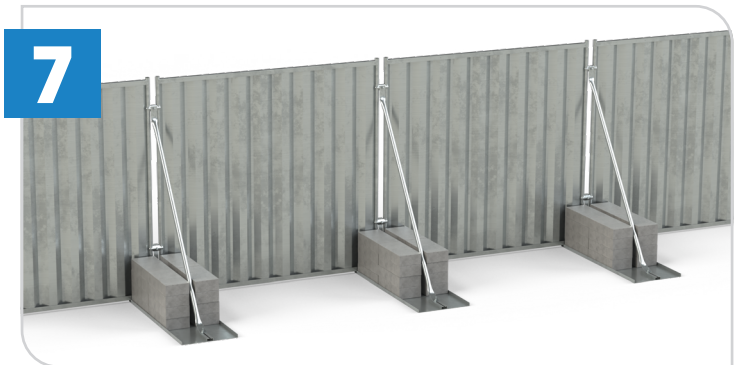

Fill the tray with the correct amount ballast.



Heavy Duty Block Tray

Required items	QTY	Code
Heavy Duty Block Tray	1	THS111720
Stabiliser 2m*	1	THS111700
Stabiliser 2.4m*	1	THS111710
HD Gripper Fence Coupler	2/3*	TFS100520

- *To be used with 2m or 2.4m In/On Ground
Use only one of the appropriate sized stabilisers.
Use 3 couplers on 2.4m hoarding and 2 on 2m.
- Concrete or rubber ballast blocks to be used in the tray